

Audimute® Acoustic Direct Mount Ceiling Tiles

Step 1



Make sure ceiling is clear of dust, dirt and is clean.

Step 2




Plan tile layout and placement.

Step 3



Butter the acousitcal Ceiling Tile adhesive to the back side of the tile. Be sure to leave about 3" form the edges. Area should be about 4".

Step 4

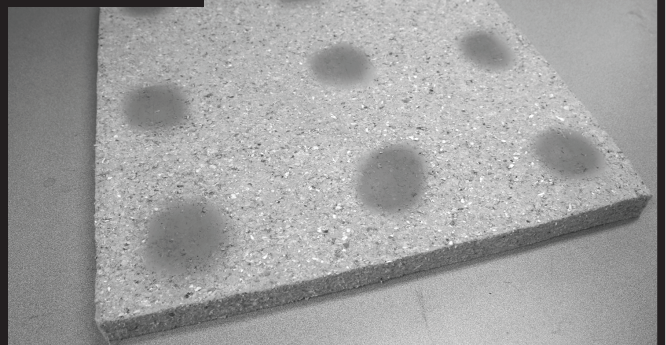

Allow to dry and form a skin.

Step 5



Place golf ball size bead of adhesive on each area of dried adhesive.

Step 6



Firmly push Acoustic Tile to the ceiling area. Be sure to apply even pressure to help distribute the adhesive. Hold for one minute.