

# Audimute® Acoustic Tile Installation


*Construction Adhesive — eco-C-tex® — AcoustiColor® — Fabric Wrapped Tiles*

## Step 1



Make sure wall is clear of dust, dirt and is clean.

## Step 2

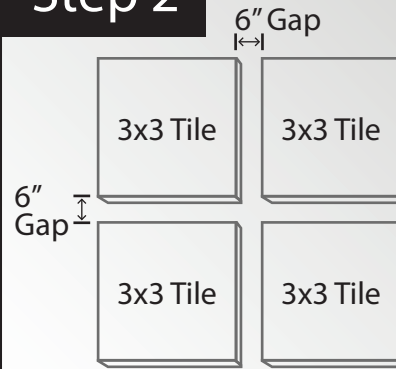


Plan Tile layout and placement.

## Step 3



Mark level line for installation guidance.

## Step 4

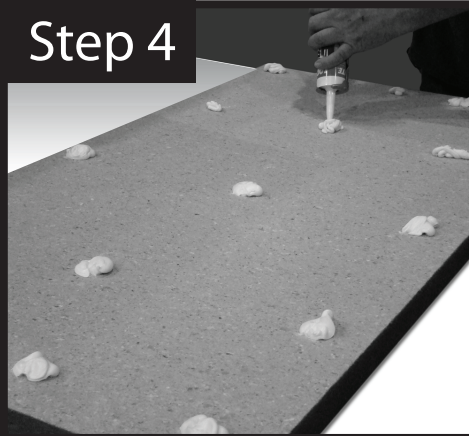

Place beads of adhesive at each corner and center of the tiles. Stay 3" away from the edges.

## Step 5



Press firmly in place making sure adhesive has spread outward from beads. Hold for 30 seconds to allow adhesive to set.

## NOTE

**Example:**  
Cracks made in AcoustiColor® from excess pressure

When pressing to the wall, use part of the shipping box for even pressure to help to prevent any damage to your tile.

## NOTE



We recommend using finishing nails in the wall at bottom of the tiles to help to support while the adhesive cures. Preventing the Tile from sliding.