

Audimute® Absorption Sheets and isolé

Step 1




Start by measuring and marking center of intended hanging area.

Step 2A



For Absorption Sheets make two level marks 23 3/4" from either side of center mark.

Step 2B

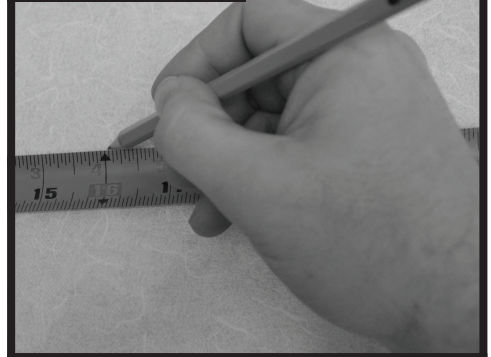


For isolé make two level marks 16" from either side of center mark.

Step 3




Pre-drill marks with .25" drill bit.

Step 4

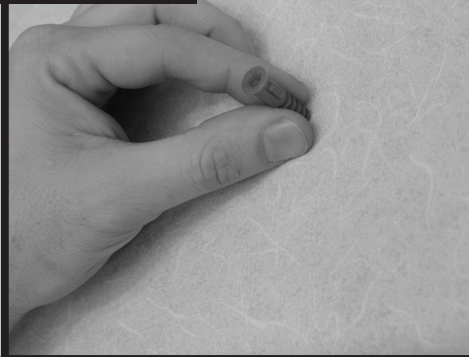

For drywall we recommend inserting anchors into pre-drilled holes.

Step 5

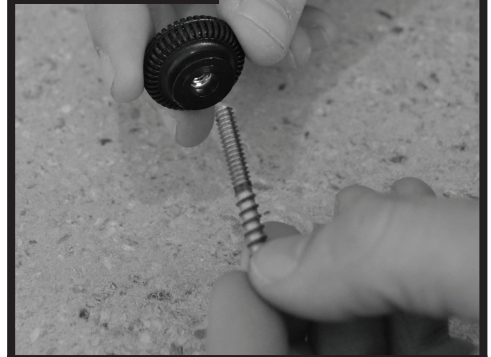

If using Audimute Easy Hang Knob, attach the knob by hand twisting it onto the flat end of the threaded bolt.

Step 6



If your product is isolé, for best results hang the tag side facing out and non tag side facing the wall.

Step 7



Holding absorption sheet/isolé up to the wall, line up grommet holes with predrilled holes and screw in your preferred hardware.

NOTE

- Ensure the product is completely exposed as the primary surface within the space and not covered with any dense/ hard surface material.
- Do not cut Audimute sound absorption sheets to fit specific size requirements. Fold the product instead.
- Avoid penetrating with curtain hooks, nails, etc, as this will permanently damage the sheet(s).
- For best results: Allow the product to hang freely with a slight drape (curve). Avoid stretching product flat against the wall surface. The billowing effect will make for better sound absorption especially when 2" – 3" away from a wall.