
## **Door Sweeps Installation Instructions:**



Make sure the bottom of your door is clean of any dust or dirt.




Apply the sweep to the bottom of the door. Only apply to one side of the door.

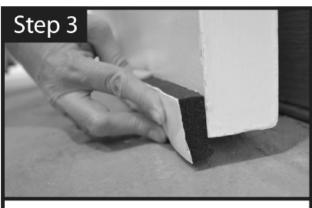

Peel off paper backing once the door sweep is applied.



Size the sweep to the bottom of your door and cut to size.

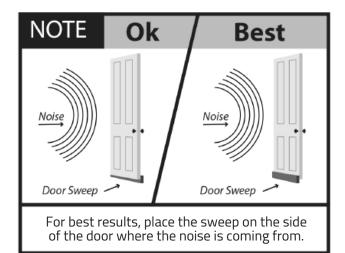



Be sure to apply the door sweep where the door can still swing open and close with realitve ease.



Audimute.com 1.866.505.MUTE