


Installation Instructions:

8ETI-RGPYHIHOSGKIMS(V+VEF)TVIWW%HLIWMZSRGPYHIH

1

Apply tape vertically to your wall
9 - 16 apart.

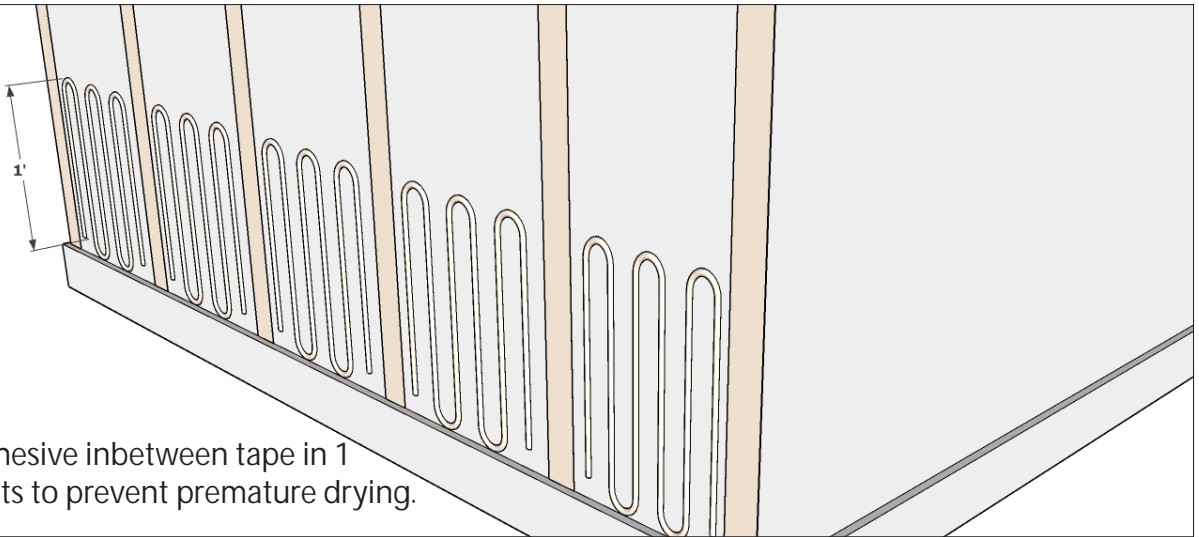

3